

WT4-9 Installation and Operating Instructions **SmartBob II Wireless System, NEMA 4X Unit**

INSTALLATION

1. Mount the WT4-9 in a place that gives its antenna a clear line-of-sight path to the other wireless unit it will be communicating with. It should be mounted at a good height above ground with its antenna vertical. **CAUTION:** To provide a degree of lightning protection, the WT4-9 should not be the highest point on a structure.
2. Wire power to the unit in accordance with the National Electrical Code and any applicable local codes. Required power to the unit is 115VAC 60Hz, with a current draw of approximately 0.1 amperes. Refer to the wiring label inside the WT4-9 cover.
3. Connect the RS485 cable to the appropriate terminals on the WT4-9 printed circuit board. **IMPORTANT:** The RS485 network is a polarized (+/-) system. Take care to maintain consistent polarity of the RS485 wires throughout your installation.
4. Set the jumper on the WT4-9 circuit board for the correct termination of the RS485 line. **IMPORTANT:** Only ONE termination at one end of the RS485 line should be set to the ON position. If the SmartBob SBR II sensor at the end of the RS485 line has its termination set to ON, then the WT4-9 termination should be set to OFF. If none of the SBR II sensors have their termination set to ON, all OFF, then the termination on the WT4-9 should be set to ON.




OPERATION

1. There is a power indicator LED on the power supply circuit board of the WT4-9. This RED LED should be on steady whenever power is applied.
2. Whenever the WT4-9 is powered-up, a boot-up sequence takes place. You must wait for the boot-up to complete before attempting to operate the system. This takes about 10 seconds.
3. There are two LED indicators on the radio transceiver unit itself. These are located next to the DB-9 connector. The red LED should be on whenever power is applied. When the radio transmits data, this red LED will blink off. The yellow LED blinks on whenever data is received by the radio. These LED's are good troubleshooting aids.
4. The wireless transceiver does not require any other operator actions for operation.



BILL OF MATERIAL

ITEM NO.	FART NUMBER	DESCRIPTION	NO. REQ'D	MATERIAL
1	110-0002	SCREW, #6	8	
2	110-0007	SCREW, #8	2	
3	145-1008	WASHER, #8	2	
4	145-1003	CUP WASHER, #6-F10	1	
5	175-0012	SCREW, #8, GRN GROUND	1	
6	220-0340	ENCLOSURE	1	
7	265-0219	PANEL	1	
8	290-0069	SPACER	4	
9	145-1002	WASHER, #6	4	
10	303-0007	ANTENNA	1	
11	318-0174	POWER PLUG	1	
12	330-0083	TUBING, SHRINK	25 FT	
13				
14	328-0006	FUSE, 400A	1	
15	388-0042	TRANSFORMER	1	
16	398-0087	CABLE, 5 CONDUCTOR	.833	
17	358-0533	CABLE, ANTENNA	1	
18	530-0245	RADIO MODEM SWITCHABLE	1	
19	530-0346	ADAPTER	1	
20	530-0317	PCB, POWER SUPPLY	1	

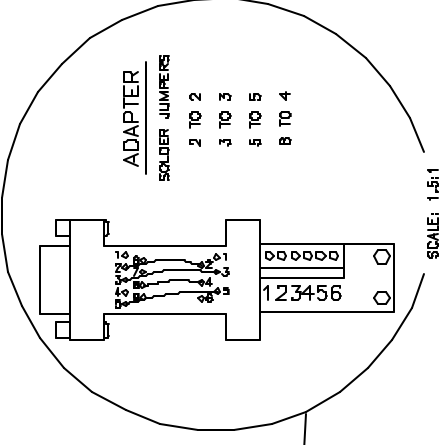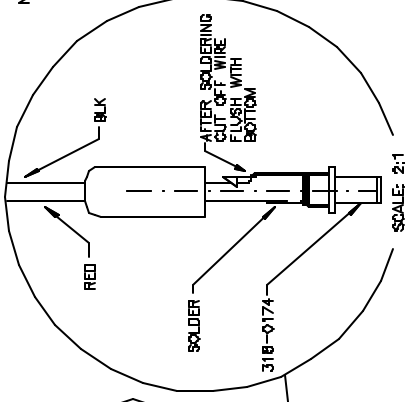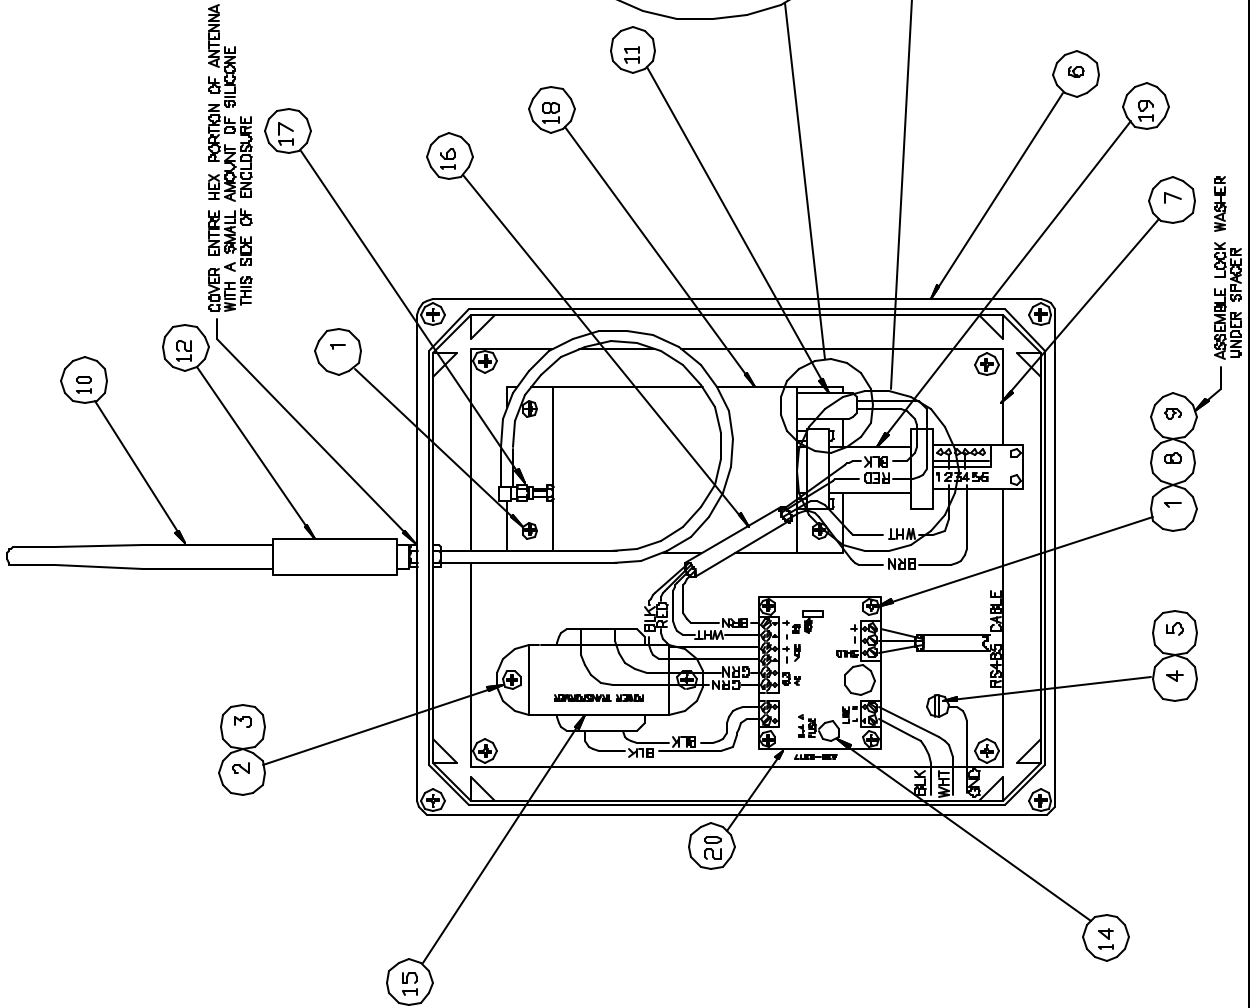

NOTES
 1. CENTER NAMEPLATE P/N 260-0171 (LEFT TO RIGHT)
 2. CENTER NAME LABEL P/N 855-0152
 3. CENTER NAME OF ADAPTER (LEFT TO RIGHT AND TOP TO BOTTOM)

DIMENSIONS ARE NOT ACCUMULATIVE

UNLESS OTHERWISE NOTED	APPROVED	DATE
1. THIS DRAWING IS THE PROPERTY OF THE COMPANY AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.		
DESIGNED BY	DATE	
DRAWN BY	DATE	
CHECKED BY	DATE	
APPROVED BY	DATE	
DO NOT SCALE DRAWING		

TITLE ASST. DRAWING WIRELESS WPT-8
 SCALE 1:1
 4200 NORTH 40TH STREET
 LINCOLN, NEBRASKA 68504
 P/N 53004-22