

## Recommended Spare Parts List

The list below is a guide of spare parts that could be stocked for maintenance and troubleshooting a SmartBob II level sensor system.

Part Number	Quantity	Description
<b>1 TO 10 SMARTBOB LEVEL SENSORS</b>		
530-0619	1	Photo interrupter (optical encoder)
530-0158	1	Spare PCB
292-0040	3	Extension springs
328-0062	3	Replacement fuses
<b>10 TO 40 SMARTBOB LEVEL SENSORS</b>		
530-0619	1	Photo interrupter (optical encoder)
530-0158	2	Spare PCBs
340-0033	2	Communications ICs
292-0040	6	Extension springs
328-0062	3	Replacement fuses
See price book	2	Cable replacement kits (specify cable type and length)
416-0636	1	Idler arm assembly
730-0202	1	RS-232 to RS-485 converter (or USB to 485, if applicable, P/N 530-0174)
416-0364	1	SureDrop assembly (if applicable)
<b>40+ SMARTBOB LEVEL SENSORS</b>		
530-0619	2	Photo interrupter (optical encoders)
530-0158	3	Spare PCBs
340-0033	4	Communications ICs
292-0040	10	Extension springs
328-0062	5	Replacement fuses
See price book	4	Cable replacement kits (specify cable type and length)
416-0636	2	Idler arm assemblies
730-0202	1	RS-232 to RS-485 converter (or USB to 485, if applicable, P/N 530-0174)
416-0364	2	SureDrop assembly (if applicable)
See price book	2	Replacement probes (specify probe type)
See price book	1	Crimp assortment (10 oval, 5 stop, 5 thimbles)
917-0001	1	Crimping tool

