

# BINMASTER®


*Taking Control . . . To A Higher Level*

---

## EXTERNAL MOUNTING INSTRUCTIONS

---

The **BinMaster Airpad Mounting Kit** eliminates the need to enter the bin to install or service air pads. By cutting a 2 5/8 x 6 3/8 hole in the bin wall, the airpad may be inserted and removed from outside the bin. First attach the mounting kit to the airpad as shown. Then insert the air pad/mounting kit assembly through the opening and lock into place with the spring steel clamp. This kit may be used for flat walled bins or round bins with at least a 3 ft. diameter . For smaller diameters additional gasket may be necessary.

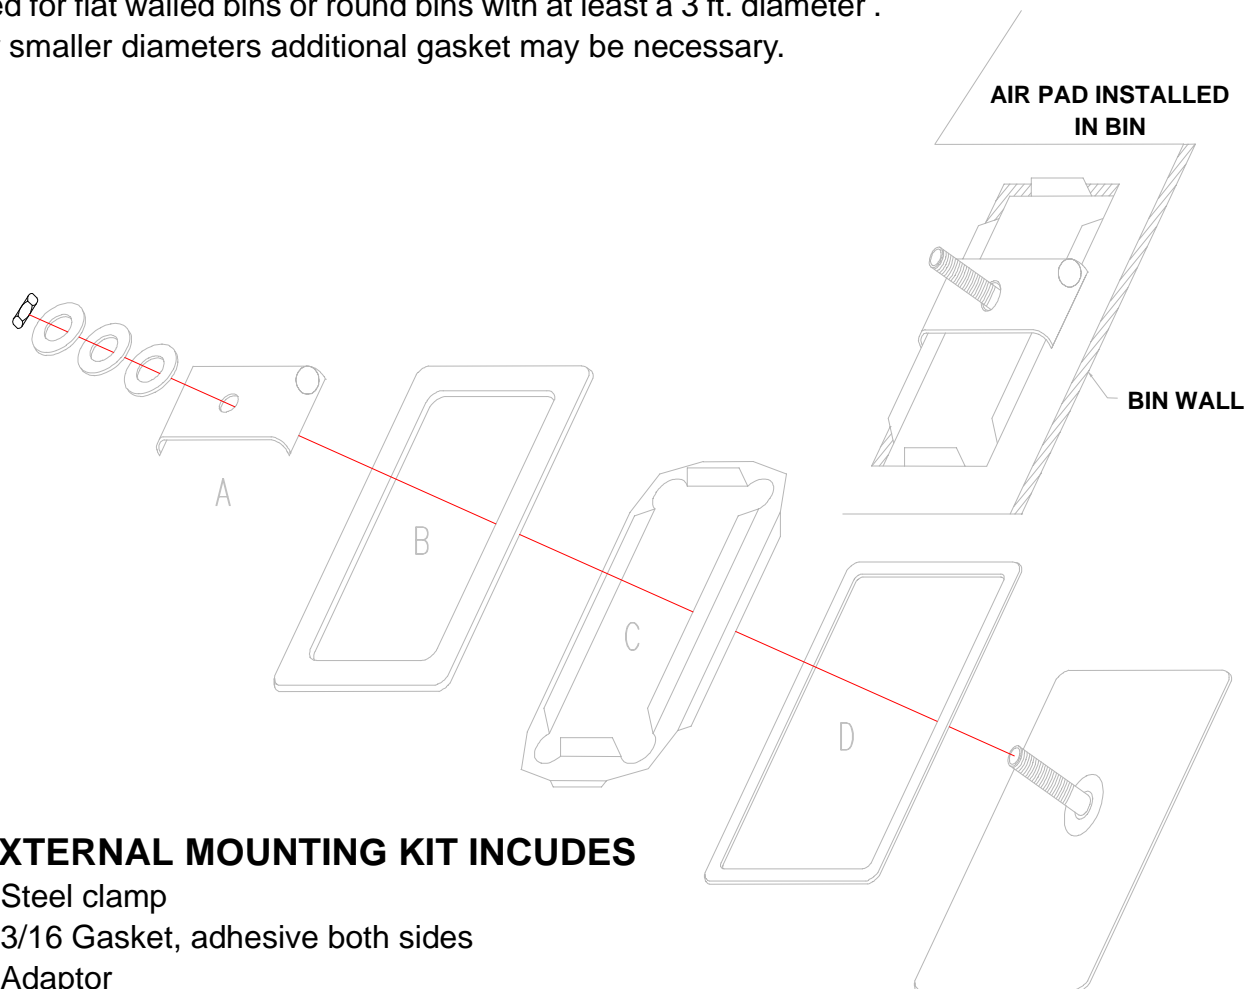

### EXTERNAL MOUNTING KIT INCLUDES

1. Steel clamp
2. 3/16 Gasket, adhesive both sides
3. Adaptor
4. 1/16 gasket, adhesive one side

# BINMASTER®

Division of Garner Industries  
7201 No. 98th Street P. O. Box 29709  
Lincoln, NE 68507 Lincoln, NE 68529  
(402) 434-9102 Fax (402)434-9133  
www.binmaster.com